


Data Create	2015/03/26	Release Note	<input type="checkbox"/> Internal <input checked="" type="checkbox"/> External
Category	FAQ	Product Group	IAG
Function	BIOS	Related OS	WS7P
Related Product	UNO-2184G		

[Abstract]

How to Change UUID number.

[Solution]

1. Create a bootable DOS USB drive.
 - A. Execute HPUSBFW.EXE and select one USB-Disk.
 - i. There are various way to create bootable DOS USB drive. Here, I just use “HPUSBFW file” as an example.

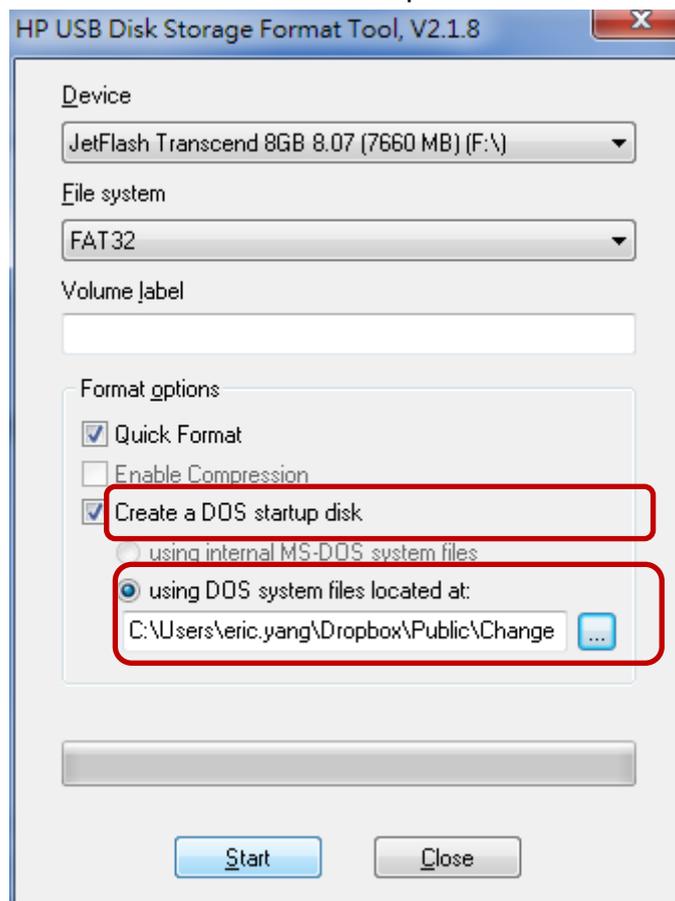

- B. Put “**Amidedos.exe**” into USB-Disk.
2. Choose USB-Disk as the first boot priority in BIOS.
3. While into DOS, there are two method to change UUID
 - A. Type “**Amidedos /su auto**” to replace the old UUID numbers by a random

new one.

- B. Type "**Amidedos /su XXXXXXXX...XXXX**" to replace the old UUID numbers by a specific new one. Total digits of UUID is **32**.

PS:

1. Amidedos can be download in the following link.

http://download.lenovo.com/ibmdl/pub/pc/pccbbs/thinkcentre_bios/90jt18usa.zip

If you found another download link, please use Amidedos(2009 version).