

## Advantech AE Technical Sharing Documentation

<b>Date</b>	2019 / 3 / 21	<b>SR#</b>	1-3700999211
<b>Category</b>	<input checked="" type="checkbox"/> FAQ <input type="checkbox"/> SOP	<b>Related OS</b>	Windows
<b>Abstract</b>	How to set the touch screen mode to mouse simulation or touch mode?		
<b>Keyword</b>	Windows, PenMount,		
<b>Related Product</b>	TPC		

■ **Problem Description:**

There are two types of screen touch modes, one is the digitizer(Touch), and the other is the mouse mode. When installing the driver, how to choose the correct mode, please refer to the following.

■ **Brief Solution - Step by Step:**

1.) PenMount touch devices, which emulate devices in the system, are classified into Digitizer (Touch) and Mouse.

During the installation of the PenMount driver, select Yes → Mouse and select No

→Digitizer (Touch) as shown below:



2.) Select "No" => Digitizer (Touch) mode to support system touch gesture.

The touch details of this mode are different from those of the mouse. The details of the touch are as follows:

Action	Active
Pen down	No
Pen move	Left down
Pen up	Left up

3.) Select "Yes" => Mouse mode. Touch feature is provided by PenMount.

The touch details of this mode are as follows:

Action	Active
Pen down	Left down
Pen move	No
Pen up	Left up