

<b>Data Create</b>	2015/03/26	<b>Release Note</b>	<input type="checkbox"/> Internal <input checked="" type="checkbox"/> External
<b>Category</b>	FAQ	<b>Product Group</b>	IAG
<b>Function</b>	LAN	<b>Related OS</b>	NA
<b>Related Product</b>	UNO-2184G		

**[Abstract]**

How to Change MAC address.

**[Solution]**

1. Download "Eeupdate.exe".
  - A. Type "eeupdate.exe download" on google. You will find many download links.
2. Make a bootable USB disk. Then, put eeupdate.exe inside USB disk.
3. Boot from USB disk.
4. Type command **Eeupdate /pciinfo/all**
  - A. You will see all LAN ports' MAC address
5. Type command **Eeupdate /nic=1 /mac="target MAC address"**
  - B. Update nic#1's MAC address