

Advantech AE Technical Share Document


Date	2021 / 10 / 04	Release Note	<input type="checkbox"/> Internal <input checked="" type="checkbox"/> External
Category	<input checked="" type="checkbox"/> FAQ <input type="checkbox"/> SOP	Related OS	Windows
Abstract	FAQ_ How to replace the audio beep file?		
Keyword	Penmount touch / audio beep		
Related Product	FPM-212/FPM-215/FPM-217/FPM-219		

■ **Description:**

User would like to replace the system touch audio beep file.


■ **Brief Solution:**

When you install touch driver, please set touch as mouse device.

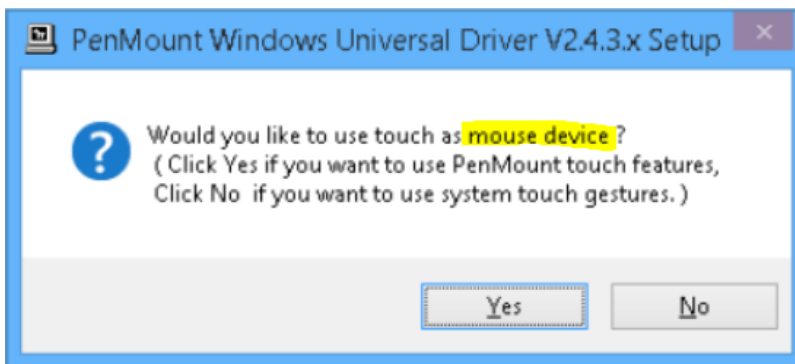

The default beep sound is buzzer beep, it only could adjust beep frequency and beep duration.

If you would like to adjust touch beep volume or use other audio beep file, you will need to change Kind of sound from buzzer beep to audio beep in penmount control panel's setting.

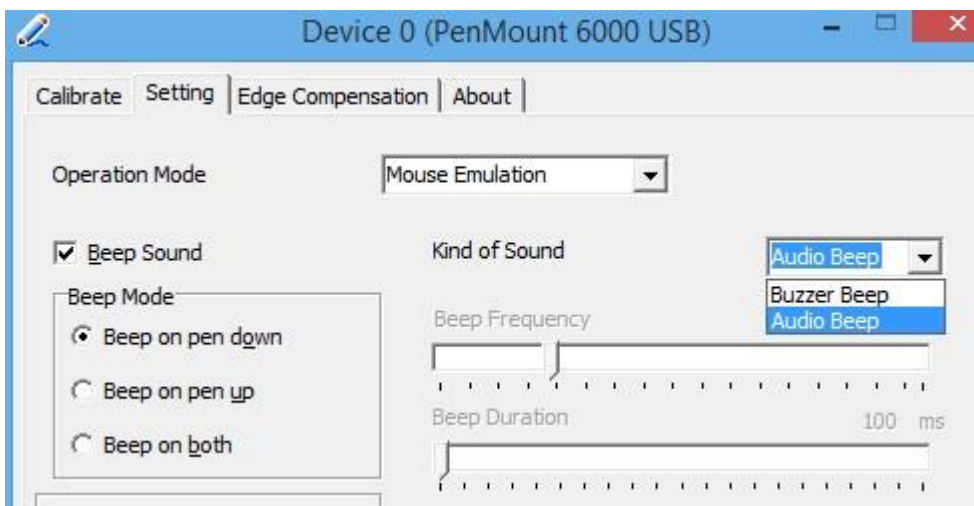

You could put your new audio file via this path: C:\Program Files (x86)\PenMount Windows Universal Driver

The Audio file format is .wav

If you would like to know more details about what is the difference between PenMount's

Mouse Device and Digitizer Device? Plesase visit:

<https://www.advantech.com/support/details/faq?id=1-1Z08F43>