



ARK-7060 + AMO-I031 SOP


1. Remove the top cover

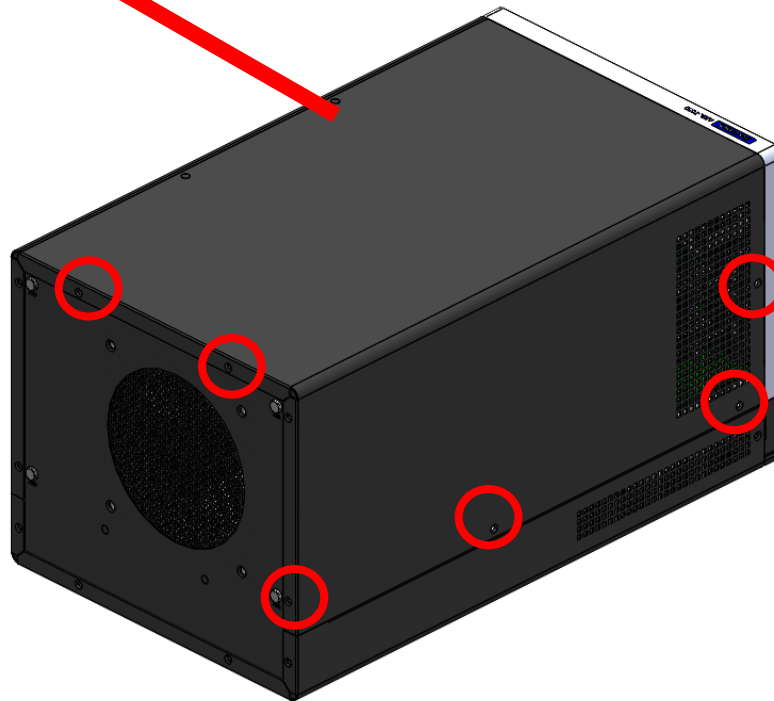


2. Remove the side cover

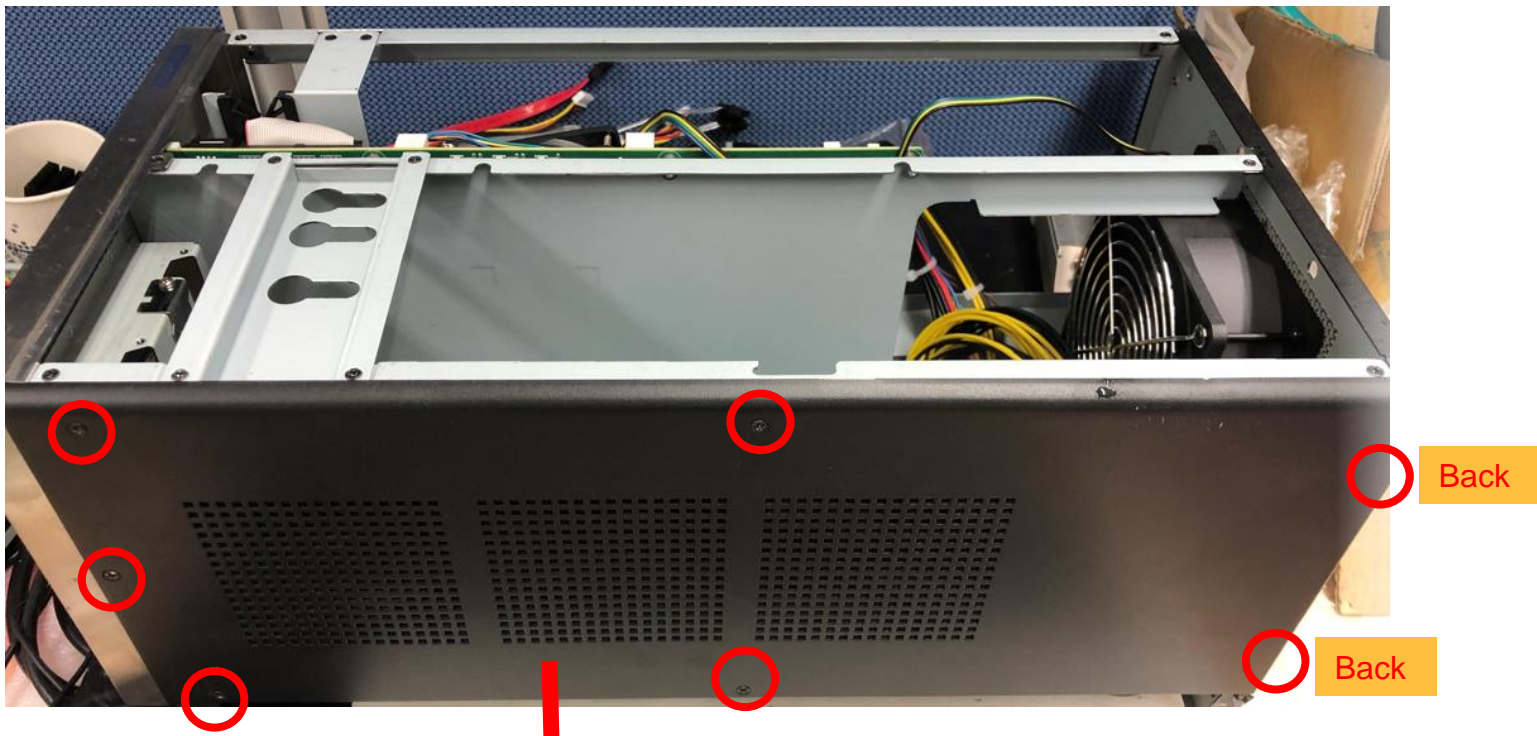

3. remove bracket

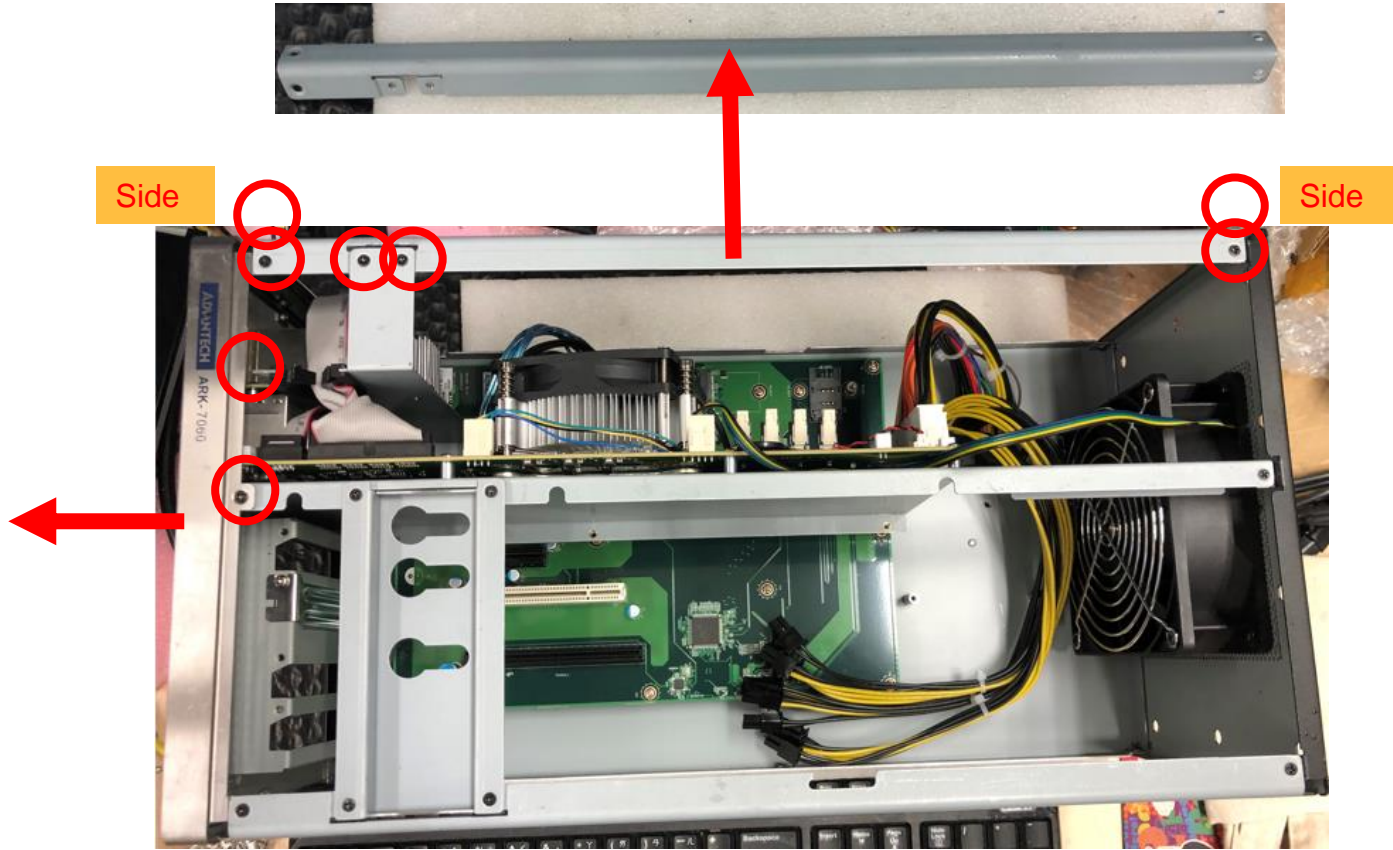



4. Assembly the AMO-I031

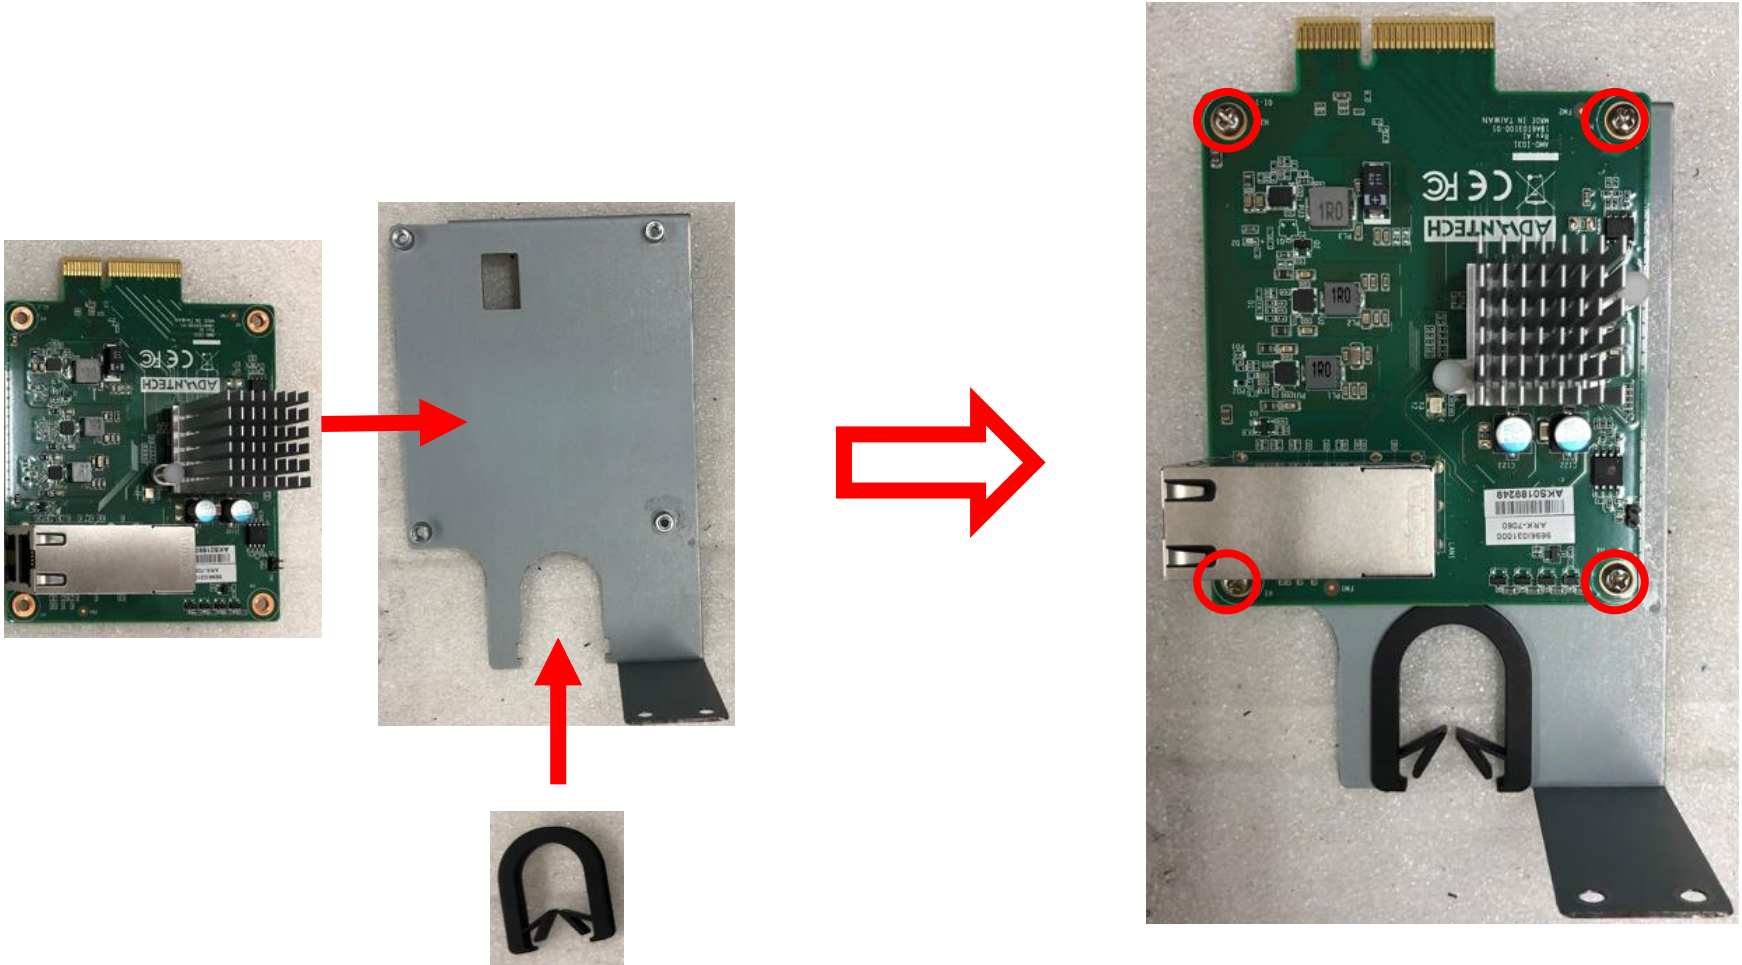

5. Install 10G Module to System



Mind the Cable

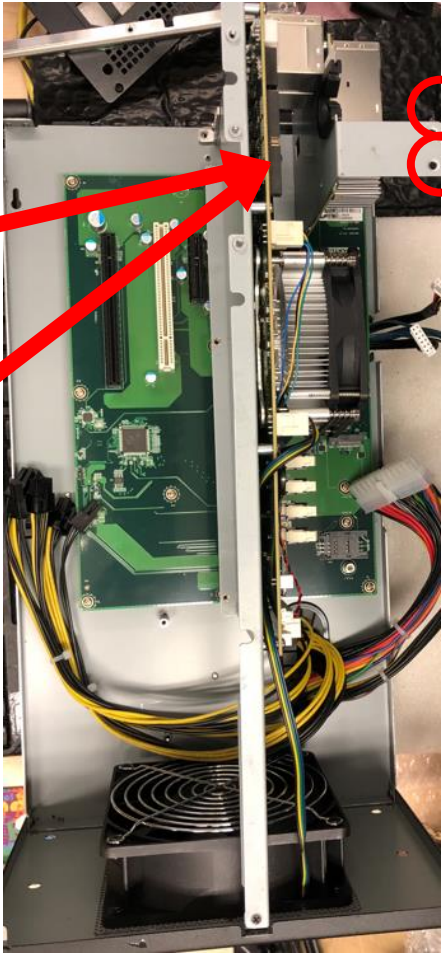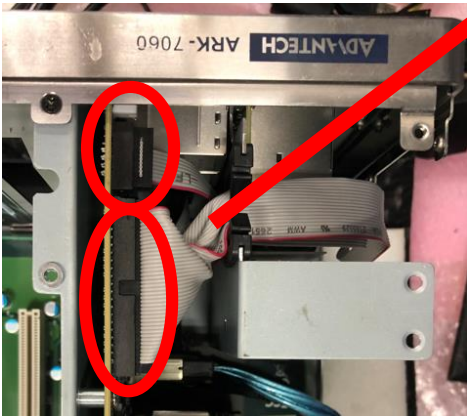

6. Put back the bracket/ side cover/ upper cover and the assembly is complete

